



Monteringsanvisning på & avklädnadsbänk stor Pukeutumispengin asennusohjeet





På & avklädnadsbänk stor
Pukeutumispengin asennusohjeet



A. Fot 8 st
Tassu 8 kpl



B. M8x40 8 st
M8x40 8 kpl




C. M6x40 10 st
M6x40 10 kpl




D. Mutter M6 10 st
Mutteri 10 kpl


1.

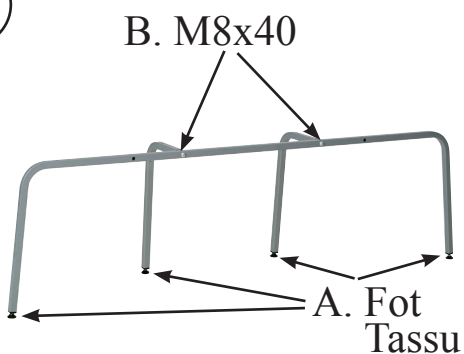


2.

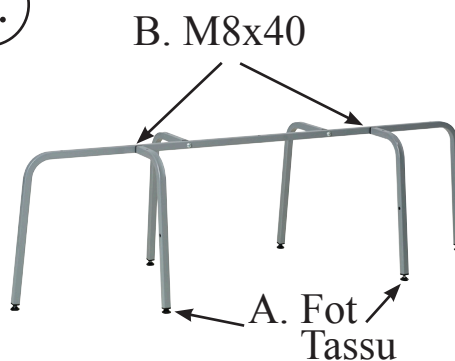


3.

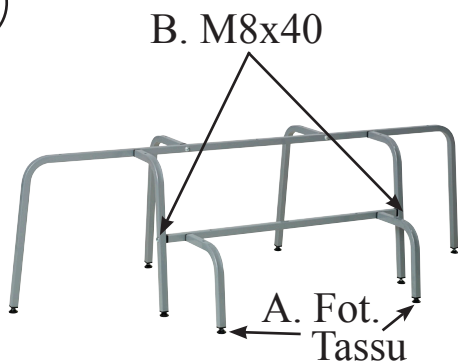

4.

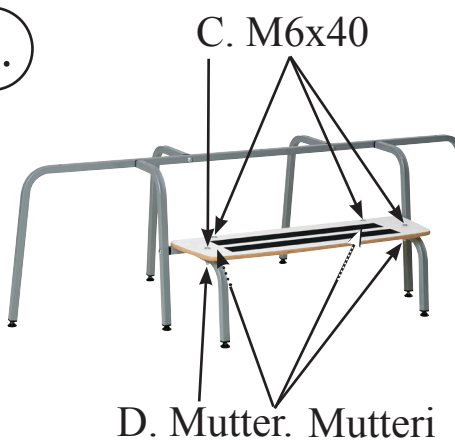

5.

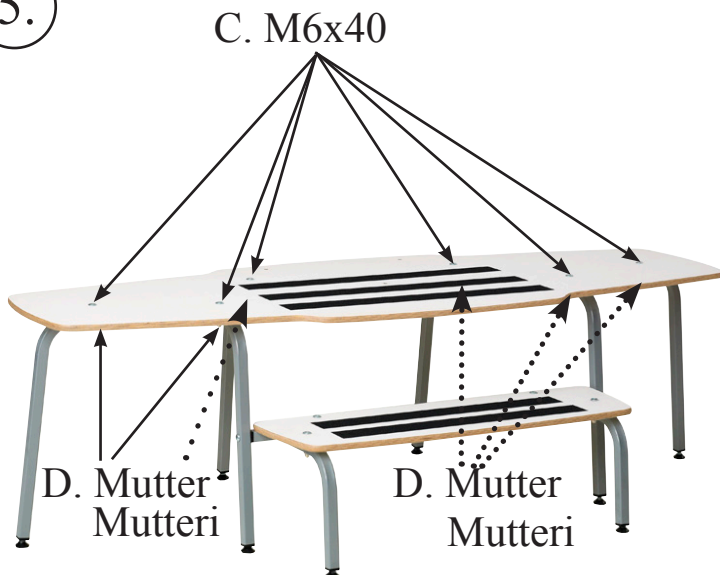

Skulle mot förmodan något
fattas, kontakta Qbena AB
+46 141 23 40 50